



Soybean Comfort™ 3-Sided Contoured Changing Pad



WARNING

INSTRUCTIONS

- Read all instructions before assembly and use of the changing pad.
- Failure to follow these warnings and instructions could result in serious injury or death.
- For your child's safety, read the labels and the instructions before using product.
- Keep these instructions for future use.

- Do not use changing pad if it is damaged or broken.
- This pad is for use on a level, stable and structurally sound surface with minimum surface dimensions of 16 in. x 32 in.
- Recommended weight limit for use is up to 30 lbs.
- Adult assembly required.
- For technical support, call 1-800-453-7673 or email customerservice@kolcraft.com.

WARNING

CHOKING HAZARD-Small parts.

- **ADULT ASSEMBLY REQUIRED.**

This package contains small parts which, before assembly, present a choking hazard to children under the age of three.

WARNING

Fall hazard. Children have suffered serious injuries after falling from changing tables. Falls can happen quickly.

- **STAY** in arm's reach of your child.
- **ALWAYS** secure this pad to the support surface by correctly using anchoring straps. See instructions.
- **ALWAYS** use restraint system when using this product.

Suffocation hazard. Babies have suffocated while sleeping on changing pads. Changing Pads are not designed for safe sleep.

- **NEVER** allow child to sleep in changing area.
- Do not use with child over 30 lbs.
- Do not use changing pad if it is damaged or broken.

Instructions for Assembly and Use:**Parts Included:** Changing Pad, Screws (2), Washers (2)**Tool Needed:** Phillips Screwdriver**Attach the changing pad to the changing surface by using the following instructions:**

1. Place changing pad on top of changing table or dresser with the anchoring straps to the back of the changing surface ensuring the pad does not hang over any edge. Make sure the back of the changing table or dresser is clean and dry.
2. Slide one washer onto each screw and feed through the hole in the anchoring straps. With the changing pad in position, use a screwdriver to attach the anchoring straps to the back of the changing table or dresser or to the wall by screwing in the mounting screws. The anchoring straps have been placed 16" apart so they can easily be attached to the wall's studs.
3. Periodically check the anchoring straps to ensure they remain tight and securely attached to the changing table or dresser.
4. To remove the pad from the changing table or dresser, unscrew the mounting screws and store in a safe place.

How to properly use the restraint system:

Position the infant on their back and centered on the changing pad, bring the safety strap around from both sides of the pad so they align over their abdomen and buckle securely. Adjust and tighten the restraint strap to fit snugly around child's waist by pulling the loose end of the safety strap away from the buckle. To release the safety strap, pull the buckle off of the child's skin and simply squeeze the tabs together on both sides of the buckle. Never leave child unattended when using your changing pad, even with all straps secured. Always keep one hand on the child to prevent falling. Always use enclosed restraint system when using this pad.

Care & Maintenance

Wipe clean with a damp cloth and mild soap.

LIMITED WARRANTY

© 2018 Made under license from Sealy Technology, LLC. Manufactured by Kolcraft Enterprises, Inc.

Kolcraft® warrants this product to be free of defects in materials and workmanship, as follows: For a period of 60 DAYS from the date of purchase, Kolcraft will repair or replace, at its option, the defective product. If you have a problem or are not satisfied with this product, please contact the Consumer Service Department at Kolcraft.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. KOLCRAFT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. We sincerely thank you for your purchase of this Kolcraft product.

To obtain warranty service, please call Kolcraft's Consumer Service Department at 1-800-453-7673 in U.S. and Canada, 1-312-361-6490 outside U.S. and Canada or contact us via email at customerservice@kolcraft.com

If the product is returned to Kolcraft's Consumer Service Department for repair or replacement, it must be shipped prepaid and adequately insured.

For further information visit www.kolcraft.com

Recall WEBSITE: HELP KEEP YOUR CHILD SAFE. Check www.recall.gov to see if any products you use with your child or any of your child's toys have been recalled.

PERSONAL RECORD CARD

Once in a while, we are less than perfect and one of our products with a problem reaches a customer. In most cases, we can solve your problem with replacement parts. Please contact us before you return one of our products to the store.

If you have a question about your product, please have the following available when you call:

- Product model number
- Date of manufacturing

You can find the Model Number and Date of Manufacture on a law tag label sewn on the back of the changing pad. Having this information ready will expedite your service call.

Please direct any comments, questions or replacement part requests to:

Kolcraft® Enterprises, Inc. Consumer Service Department
1100 W Monroe St
Chicago, IL 60607

1-800-453-7673 in U.S. & Canada, 1-312-361-6490 outside U.S. & Canada
Central Standard Time, 8 am-5 pm Monday - Thursday, 8 am - 3 pm Friday
e-mail: customerservice@kolcraft.com

Model / Style Number: _____

Date of Manufacture: _____

Date of Purchase: _____